



UltraMAX™ Outlet Termination Instructions

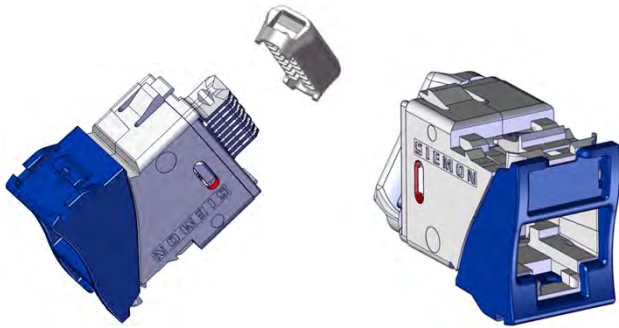


Hybrid

Keystone


Panel mount

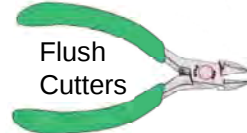

Flush
Cutters

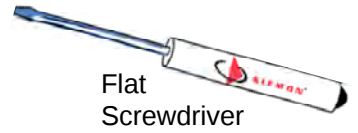


Flat
Screwdriver

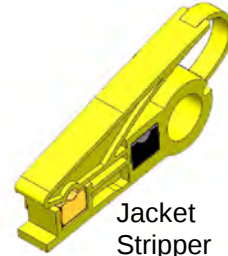

Jacket
Stripper




Palm guard insert
P/N: PG2-U

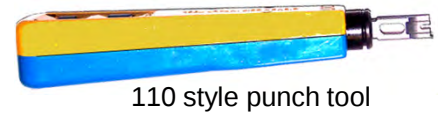

110 style punch tool

Tools

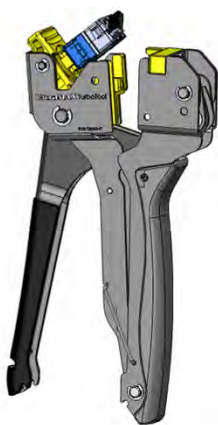


UltraMAX
TurboTool
p/n: UMAX-TT




UltraMAX 4-Pair
Impact Tool
p/n: UMAX-PD

Tools (Optional)

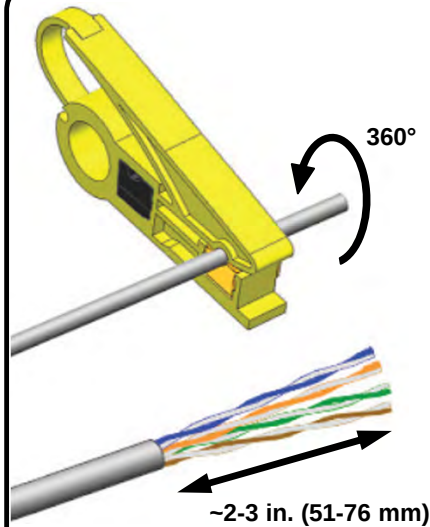


1

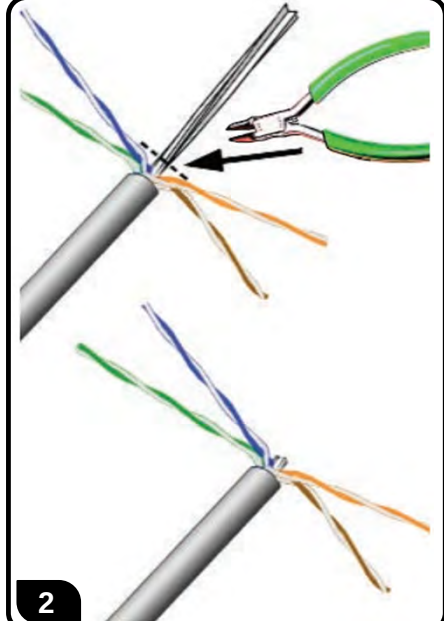

2

Corresponding
Pin Position's

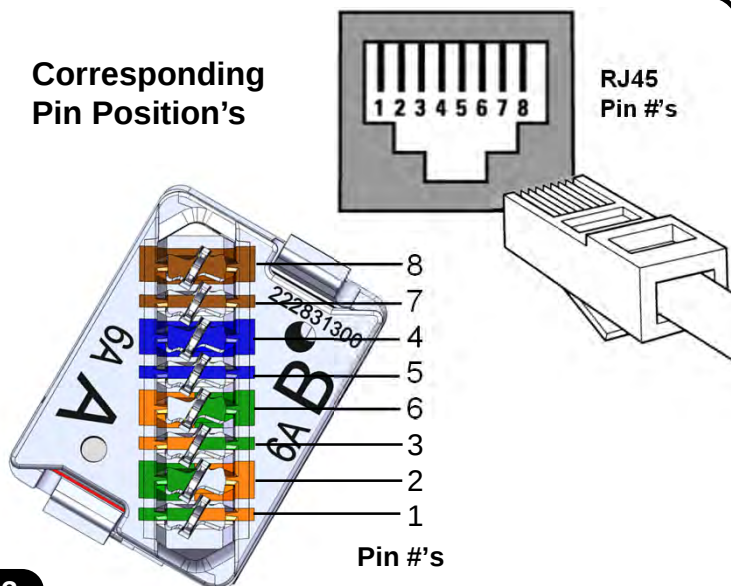

3



PG2-U

Tip: Depress latch
or angle into Palm
guard insert




4

Hole for optional
rack mount assist
during
terminations




Optional
Term. Cap
storage

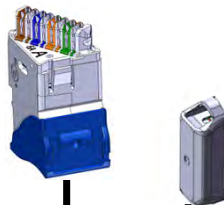


Term. Caps

UltraMAX™ Outlet Termination Instructions

Wire scheme color mapping

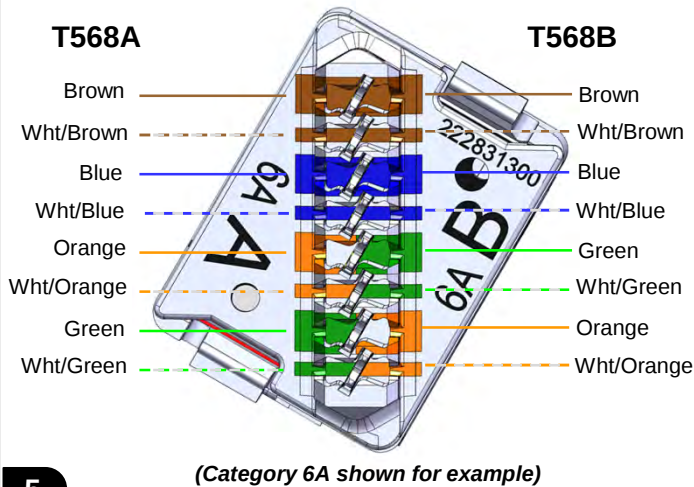


Installers preference

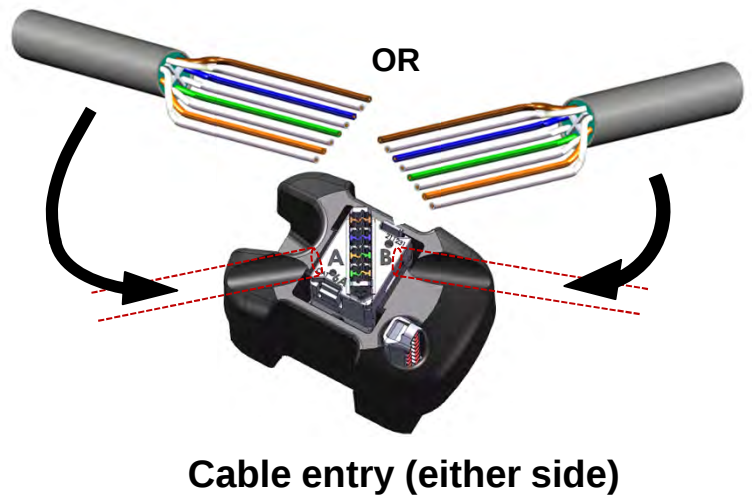


Installers preference

Left side entry

Right side entry

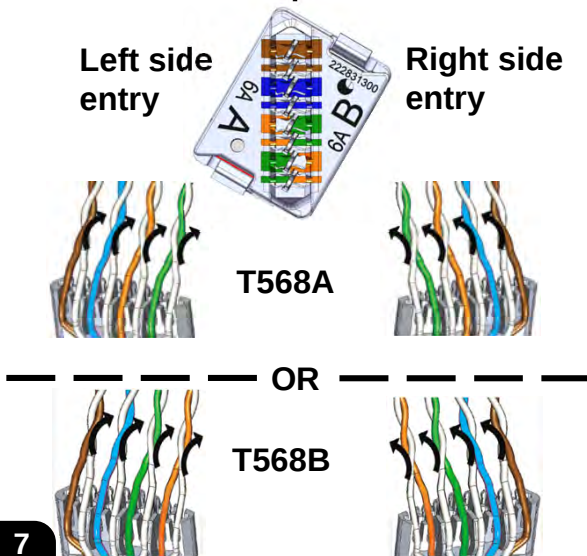

≤ ½ in.
(13mm)

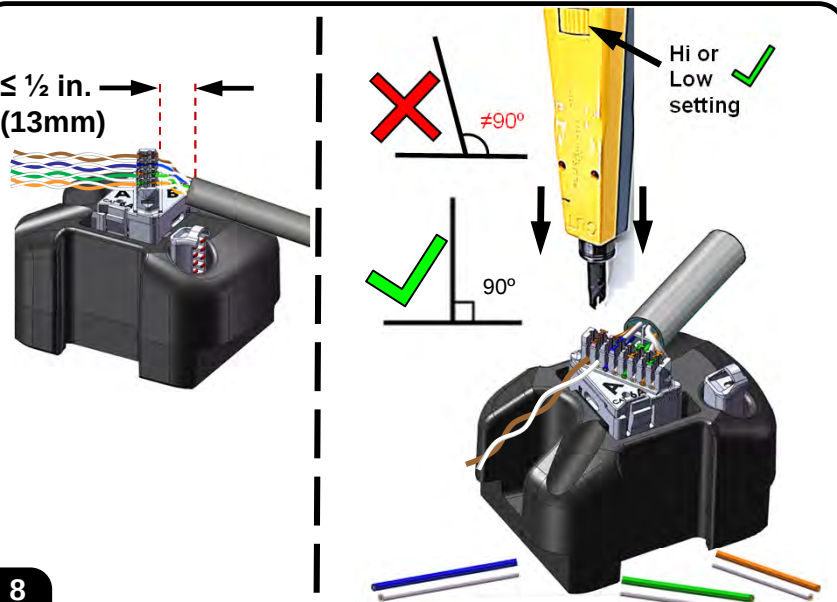


For use in place of 110 tool.
Recommended primarily for loaded
UltraMAX patch panels* but can use
with palm guard insert on flat surface.

*Not recommended with the 48-port
1U version panels.

Also reference
UltraMAX 4-pair
impact Tool
instructions >>




Align tool properly to prevent
miss-terminations or outlet
damage

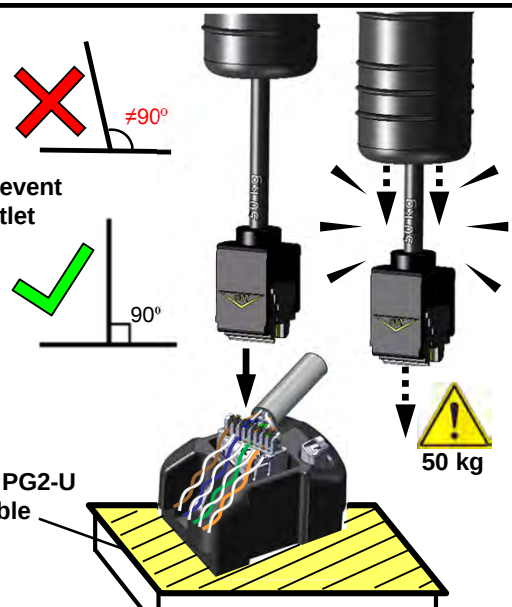

Optional UltraMAX 4-pair Impact Tool

UltraMAX™ Outlet Termination Instructions

UltraMAX TurboTool

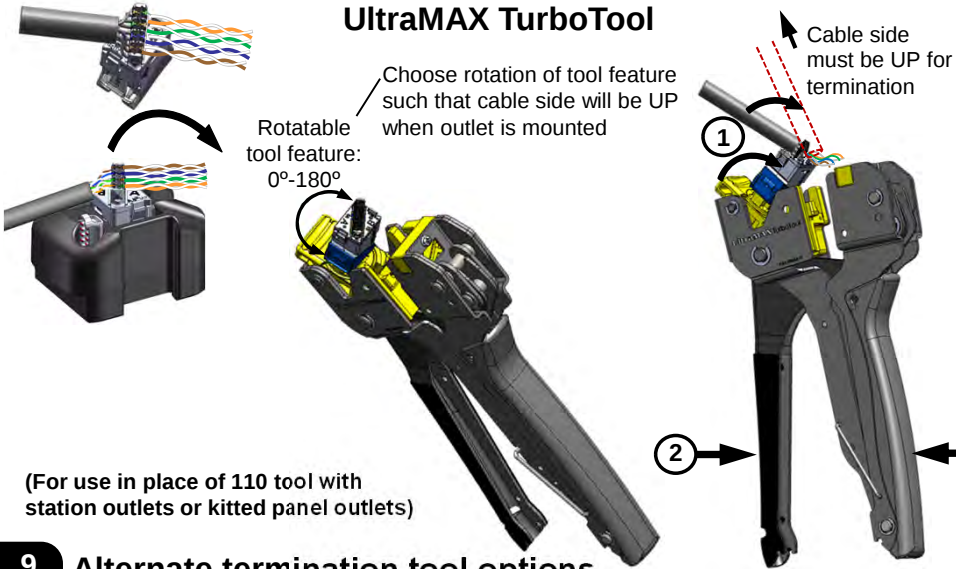


Also reference UltraMAX Turbo Tool termination instructions >>



9 Alternate termination tool options




10

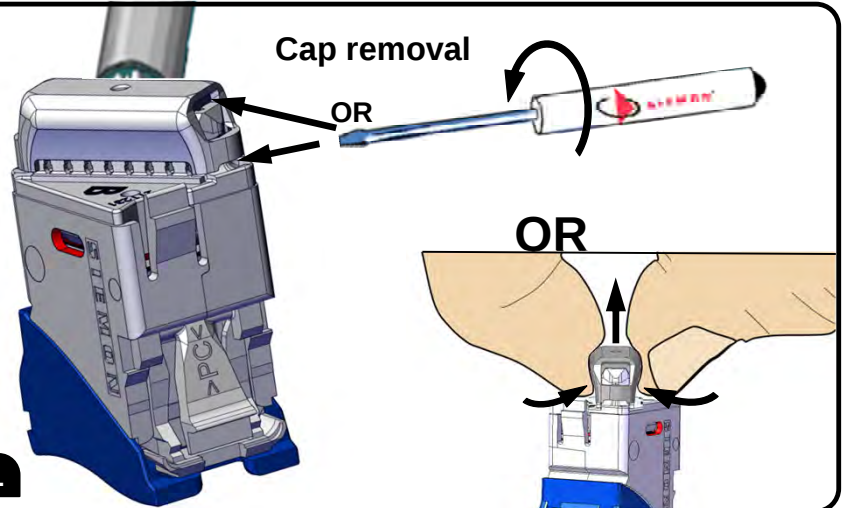

11

Faceplate mounting

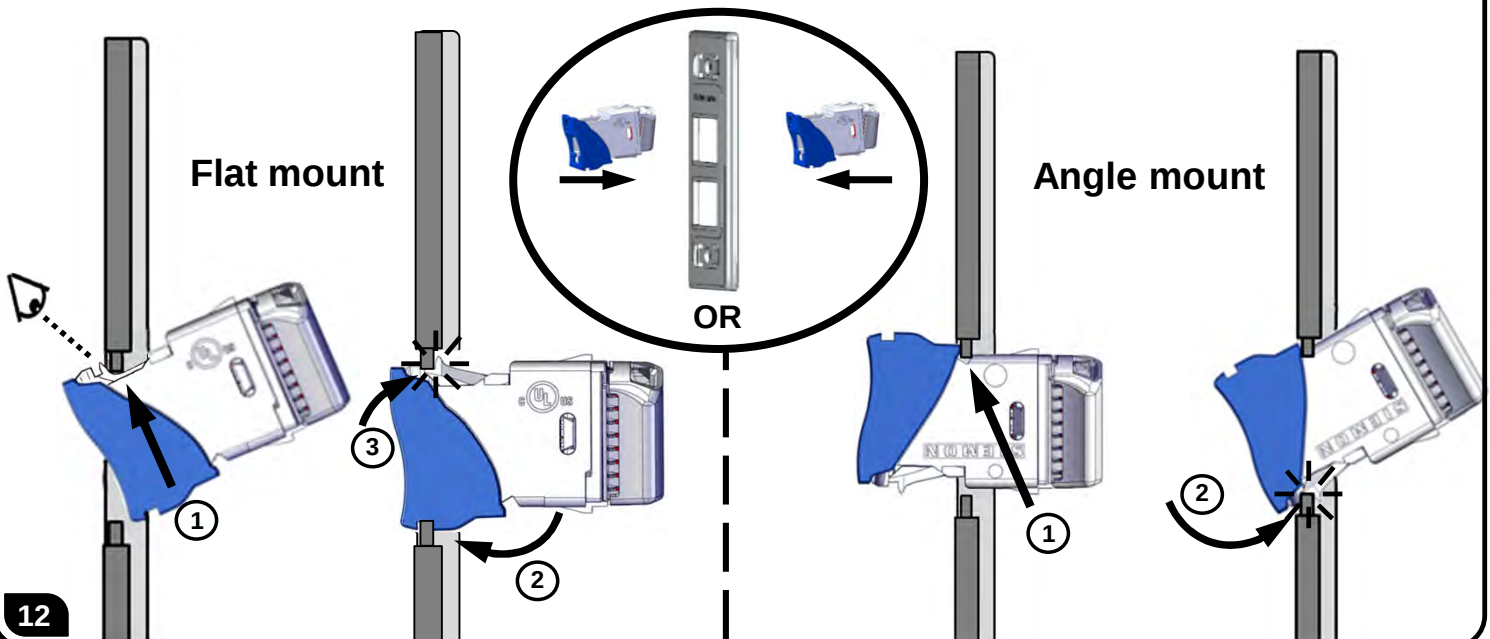

12

UltraMAX™ Outlet Termination Instructions

Icon's (Optional – for Hybrid version only)



p/n:
Z-ICON-(XX)B

Icon
Placement



Flat mount




Angle mount

13



UltraMAX
Insert
p/n: PG2-U

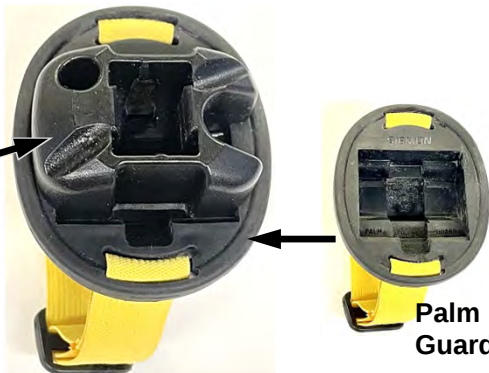

Palm Guard-2
p/n: PG2

Palm
Guard

Part Numbers:

PG2 - Palm Guard (optional) with UltraMAX insert

PG2-U - UltraMAX insert only

Related products

For related termination videos
and termination instructions
with UltraMAX products go to:

<https://www.siemon.com>



To assist safe installations, comply with the following:

- A. Use caution when installing or modifying telecommunications circuits.
- B. Never touch uninsulated wire terminals unless the circuit has been disconnected.
- C. Never install this device in a wet location.
- D. Never install wiring during a lightning storm.

Lors de l'installation, respectez les consignes de sécurité suivantes:

- A. Utiliser avec prudence lors de l'installation ou de la modification circuits de télécommunications.
- B. Ne jamais toucher les bornes de fil métallique non isolés sauf si le circuit a été débranché.
- C. Ne jamais installer cet appareil dans un endroit humide.
- D. Ne jamais installer pendant un orage.

To ensure you have the latest
revision to this document, please visit: www.siemon.com



Global Headquarters
Watertown, Connecticut USA
Tel: (1) 866-548-5814

For a complete listing of our global offices visit our web site