

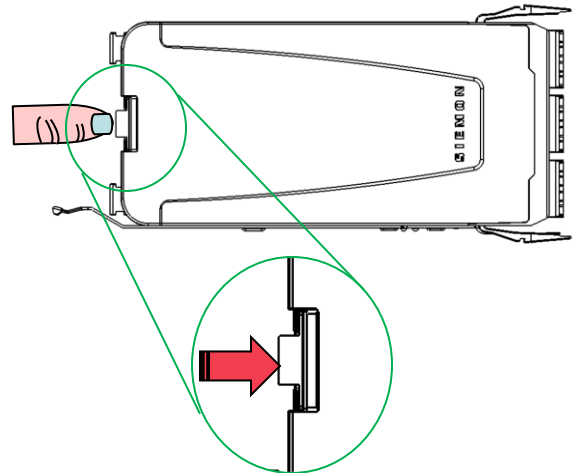


LightVerse™ Ribbon Splice Cassette Instructions

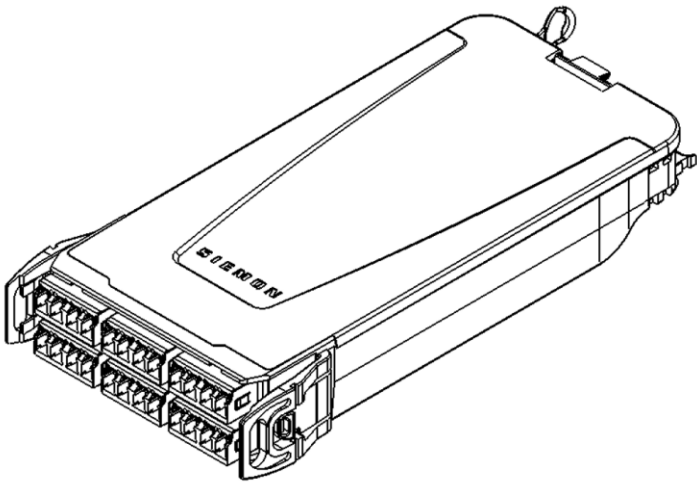


To remove the top cover, push in the rear release latch as shown.

1

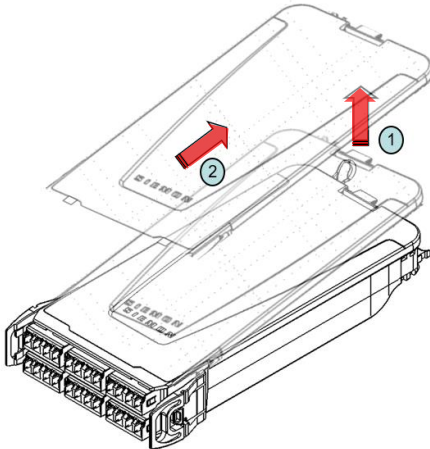


1. With the rear release latch depressed, lift the rear of the cover upwards.
2. Pull the cover back and away from the cassette.

2

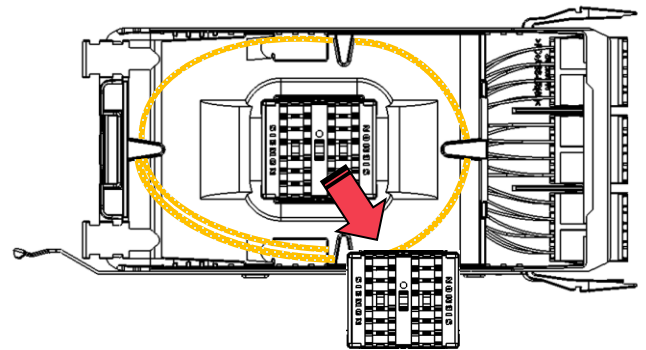


If using the 24-fiber version of the splice cassette it will be necessary to remove the top-level splice sleeve holder. Pull it up and it will detach from the bottom splice sleeve holder.

3

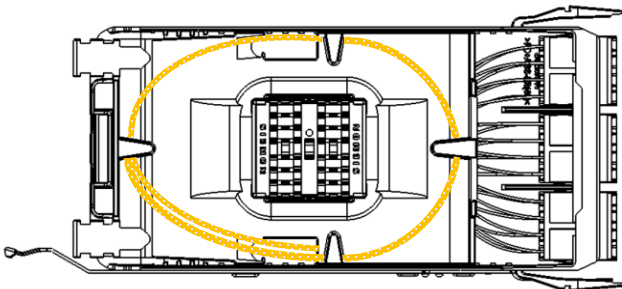

A 17 in. (43 cm) storage loop of fiber is stored in the management tray as shown. The coiled fiber should place the splice end at the splice sleeve holder. Pigtails are labeled **1** for ports 1-12, **2** for ports 13-24.







4

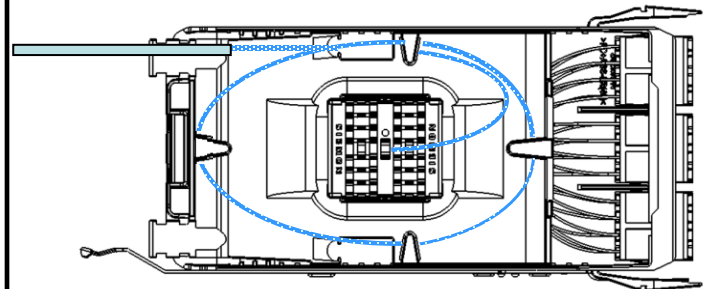


Prepare approximately 20 in. (51 cm) of fiber length from the distribution fiber jacket for proper routing into the fiber guides as shown.

5

LightVerse™ Ribbon Splice Cassette Instructions

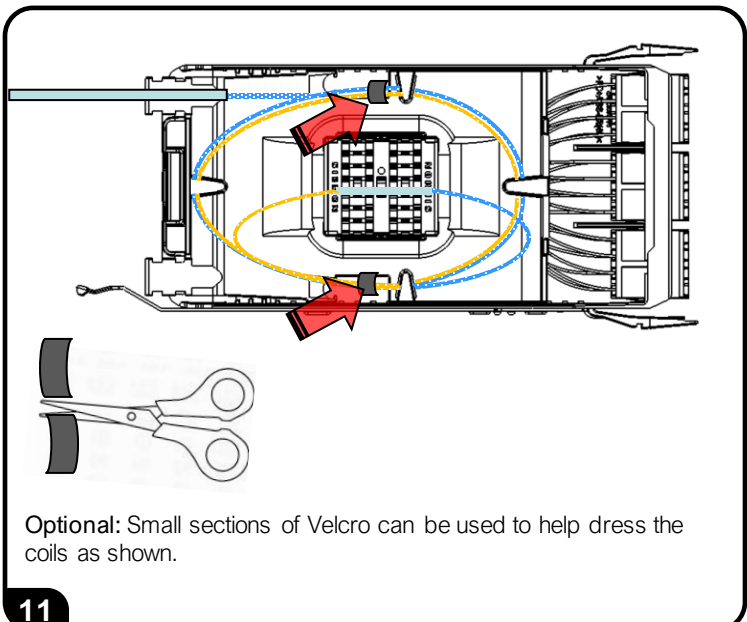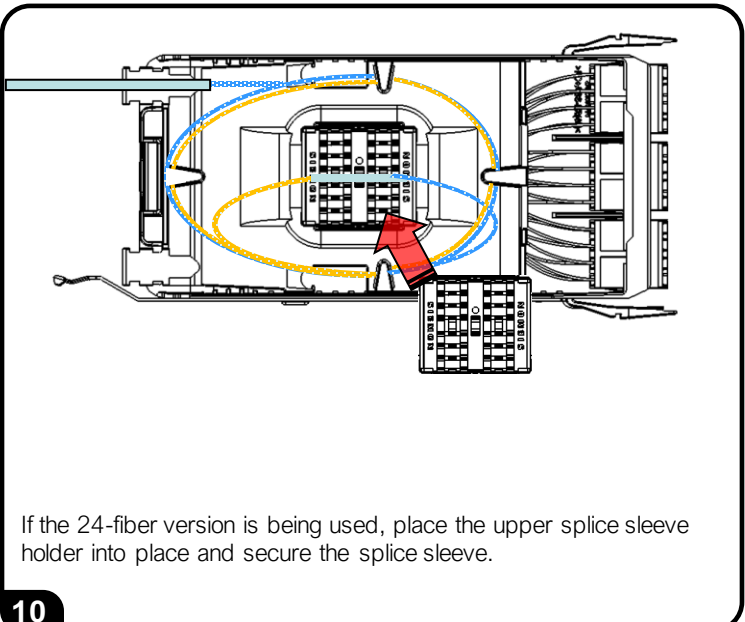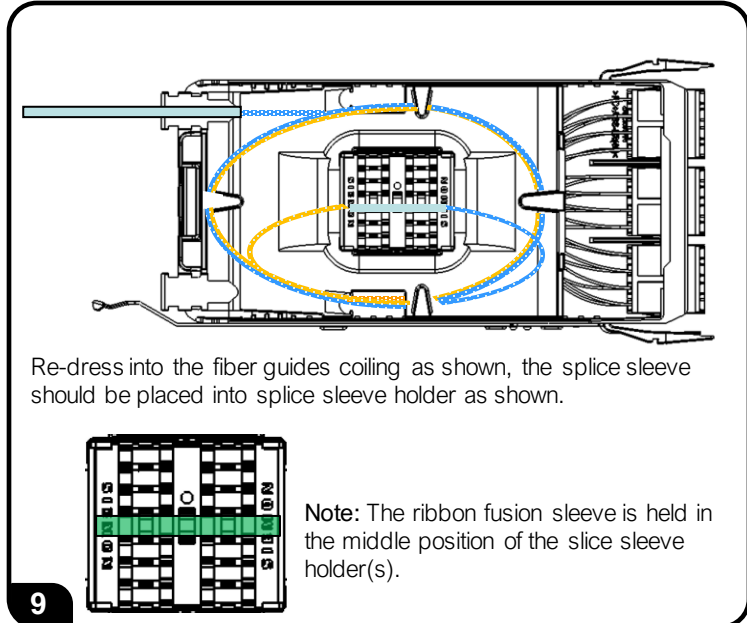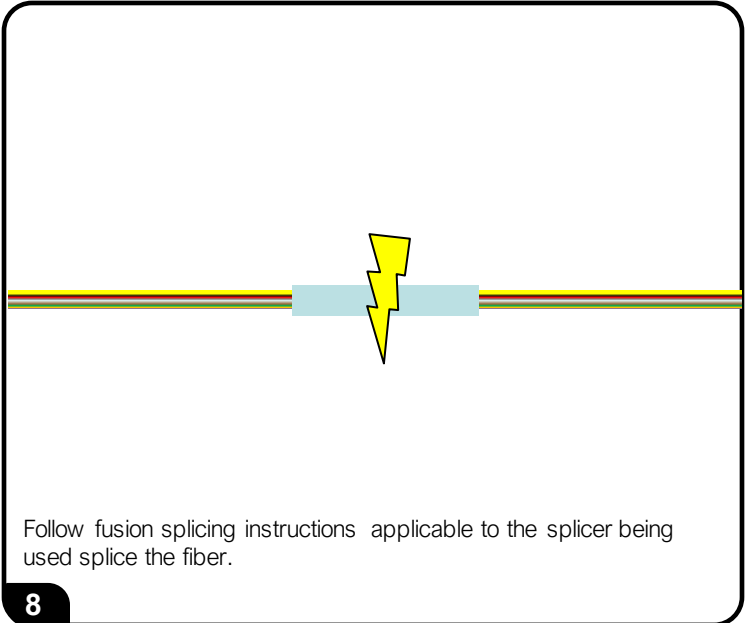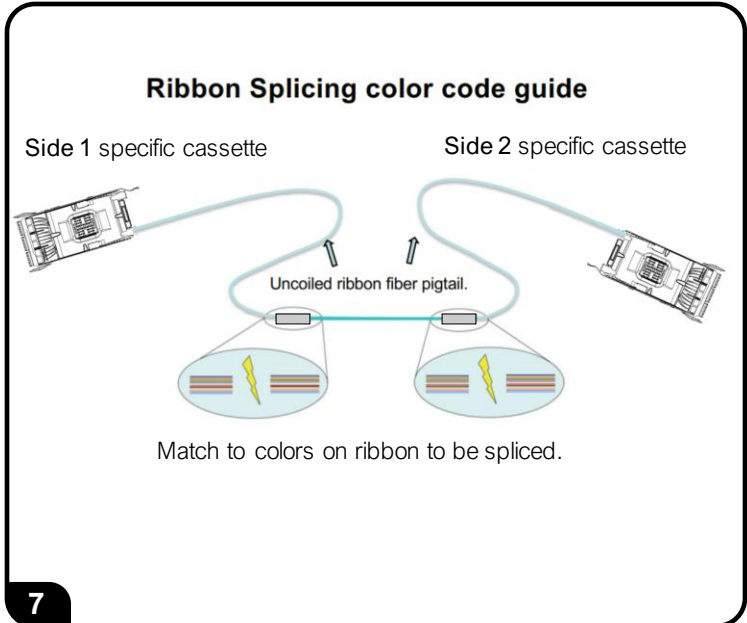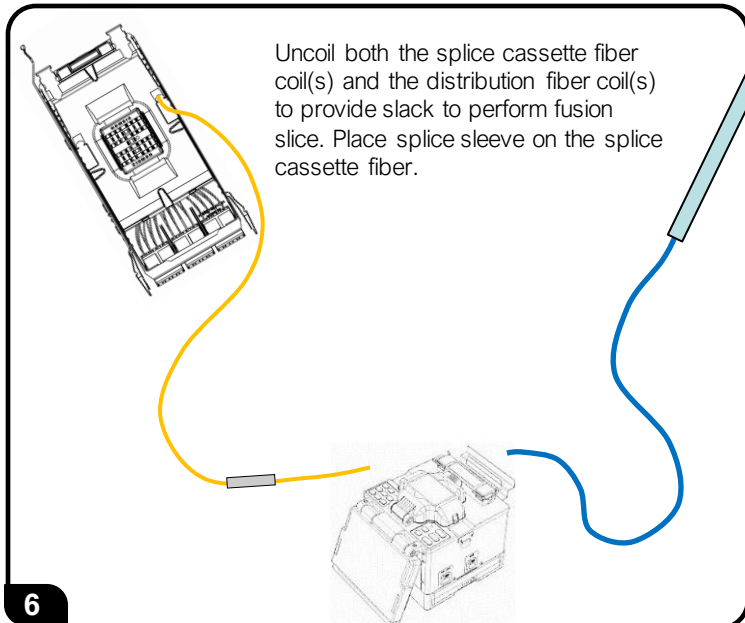


LightVerse™ Ribbon Splice Cassette Instructions

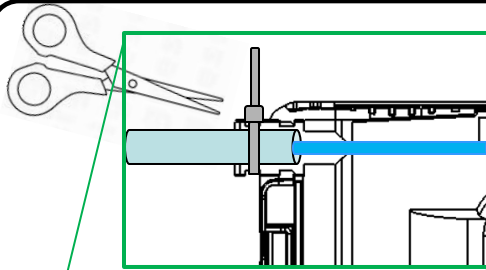


Round Ribbon jacket or tubing can be attached to the round tie down as shown.

Do not over tighten tie wraps to avoid damage to fiber.

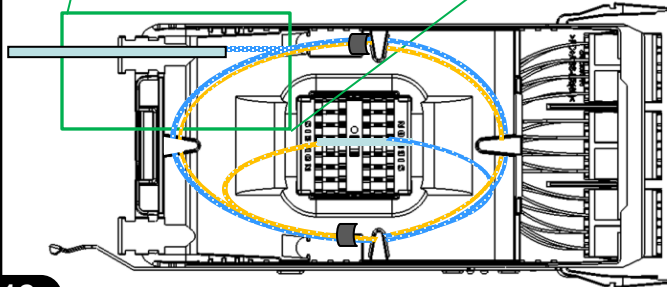


12a

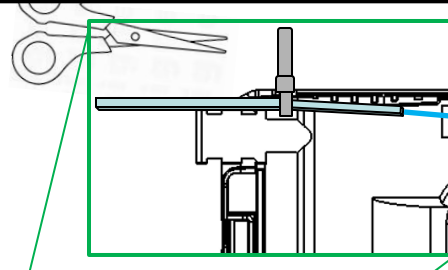


Flat Ribbon jacket or tubing can be attached to the flat tie down as shown.

Do not over tighten tie wraps to avoid damage to fiber.

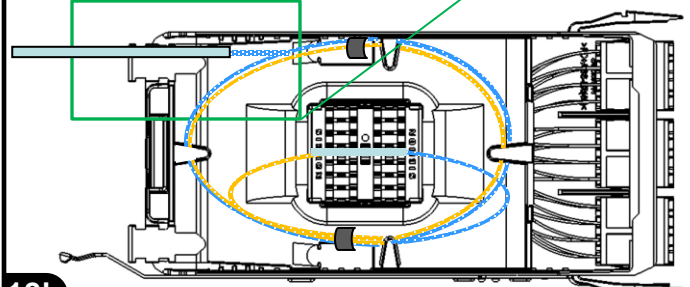


12b

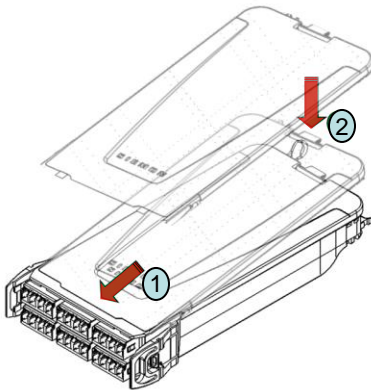

Place the cover back in place on the cassette being careful not to pinch fibers between the cassette and cover when snapping into place. Follow instructions from LightVerse enclosures and panels to install the cassettes.

13

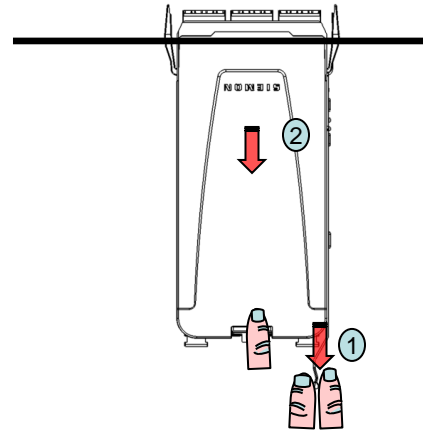

To remove the cassette from the rear of its mounting position, pull the tether while lightly holding the cassette.

14

To assist safe installations, comply with the following:

- A. Use caution when installing or modifying telecommunications circuits.
- B. Never touch uninsulated wire terminals unless the circuit has been disconnected.
- C. Never install this device in a wet location.
- D. Never install wiring during a lightning storm.

Lors de l'installation, respectez les consignes de sécurité suivantes:

- A. Utiliser avec prudence lors de l'installation ou de la modification circuits de télécommunications.
- B. Ne jamais toucher les bornes de fil métallique non isolés sauf si le circuit a été débranché.
- C. Ne jamais installer cet appareil dans un endroit humide.
- D. Ne jamais installer pendant un orage.



To ensure you have the latest revision to this document, please visit: www.siemon.com

Global Headquarters
Watertown, Connecticut USA
Tel: (1) 866-548-5814

For a complete listing of our global offices, please visit our website.