


Palm Guard-2 & UltraMAX Palm Guard Insert




p/n: PG2
(Palm Guard with UltraMAX insert)

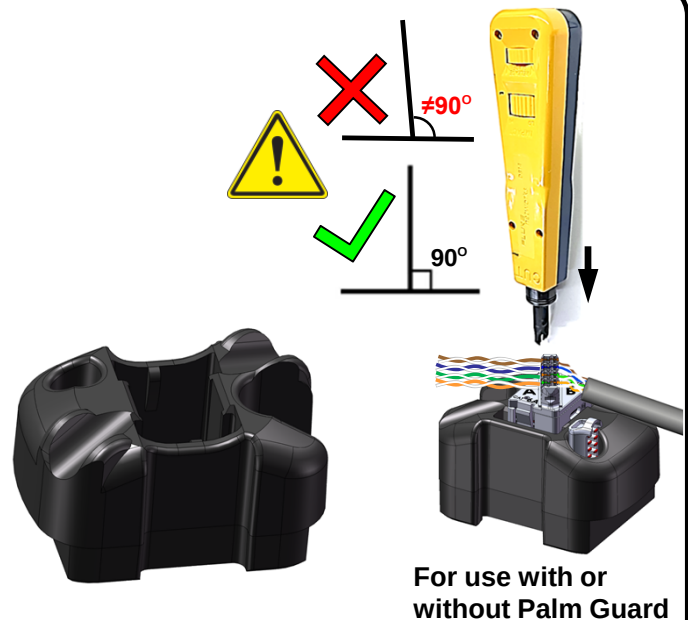

p/n: PG2-U
(UltraMAX insert only)

CT Series Outlets

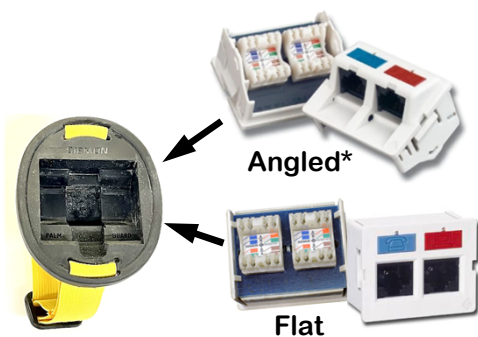


***For CT couplers:** insert so termination posts are perpendicular and terminate using a single position 110 impact tool




1

UltraMAX Series Outlets

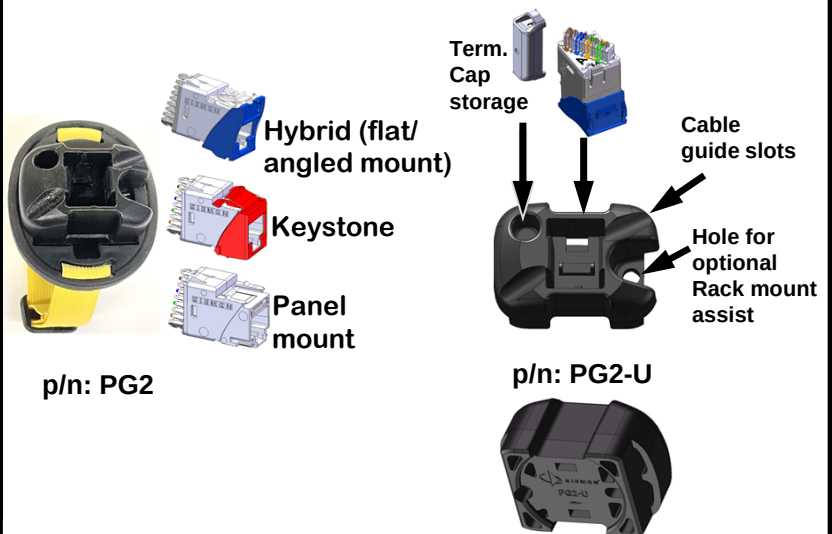

p/n: PG2

p/n: PG2-U

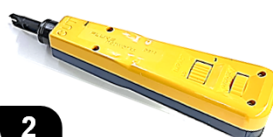

2

Palm Guard-2 & UltraMAX Palm Guard Insert



4-Pair high
impact tool
p/n: UMAX-PD



Not recommended:
4-pair tool with Palm
guard and insert.



Required: 4-pair
tool with Palm
guard insert on flat
stable surface



3 Compatibility

For related termination videos
and termination instructions
with UltraMax products go to:



<https://www.siemon.com>

To assist safe installations, comply with the following:

- A. Use caution when installing or modifying telecommunications circuits.
- B. Never touch uninsulated wire terminals unless the circuit has been disconnected.
- C. Never install this device in a wet location.
- D. Never install wiring during a lightning storm.

Lors de l'installation, respectez les consignes de sécurité suivantes:

- A. Utiliser avec prudence lors de l'installation ou de la modification circuits de télécommunications.
- B. Ne jamais toucher les bornes de fil métallique non isolés sauf si le circuit a été débranché.
- C. Ne jamais installer cet appareil dans un endroit humide.
- D. Ne jamais installer pendant un orage.

To ensure you have the latest
revision to this document, please visit: www.siemon.com



Global Headquarters
Watertown, Connecticut USA
Tel: (1) 866-548-5814

For a complete listing of our global offices visit our web site